

Link: https://help.responsiblefleet.com/installation-guide/tt-2200-battery-replacement/ Last Updated: July 20th, 2018

Required tools and supplies include a Phillips-head screw driver and four L92 Ultimate Lithium AAA batteries.

1. Separate device from mounting bracket

Remove the four screws holding the device to the mounting bracket.




2. Switch device OFF

On the end of the device, remove the two screws, switch cover panel, and switch the device to the OFF position.



Link: https://help.responsiblefleet.com/installation-guide/tt-2200-battery-replacement/ Last Updated: July 20th, 2018

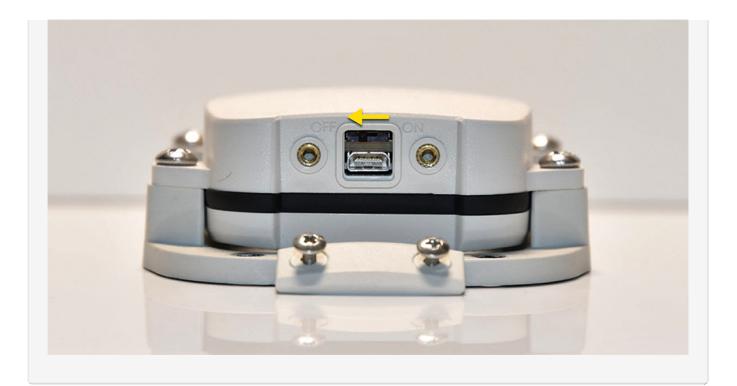

3. Disassemble device

On the back of the device, remove the four screws, carefully separate the upper and lower halves, and remove the batteries.



Link: https://help.responsiblefleet.com/installation-guide/tt-2200-battery-replacement/ Last Updated: July 20th, 2018



4. Replace batteries

Replace the batteries with four new L92 Ultimate Lithium AAA batteries.



Link: https://help.responsiblefleet.com/installation-guide/tt-2200-battery-replacement/ Last Updated: July 20th, 2018



5. Reassemble device

Making sure the black gasket is seated in the groove before reconnecting, screw the upper and lower halves back together.





Link: https://help.responsiblefleet.com/installation-guide/tt-2200-battery-replacement/ Last Updated: July 20th, 2018

6. Switch device ON

While outside in the open, switch the device to the ON position, then screw the switch cover back into place.





Link: https://help.responsiblefleet.com/installation-guide/tt-2200-battery-replacement/ Last Updated: July 20th, 2018

7. Reconnect device to mounting bracket

Screw the device to the mounting bracket and properly dispose of the old batteries.

